



Remove 3 mm allen heads

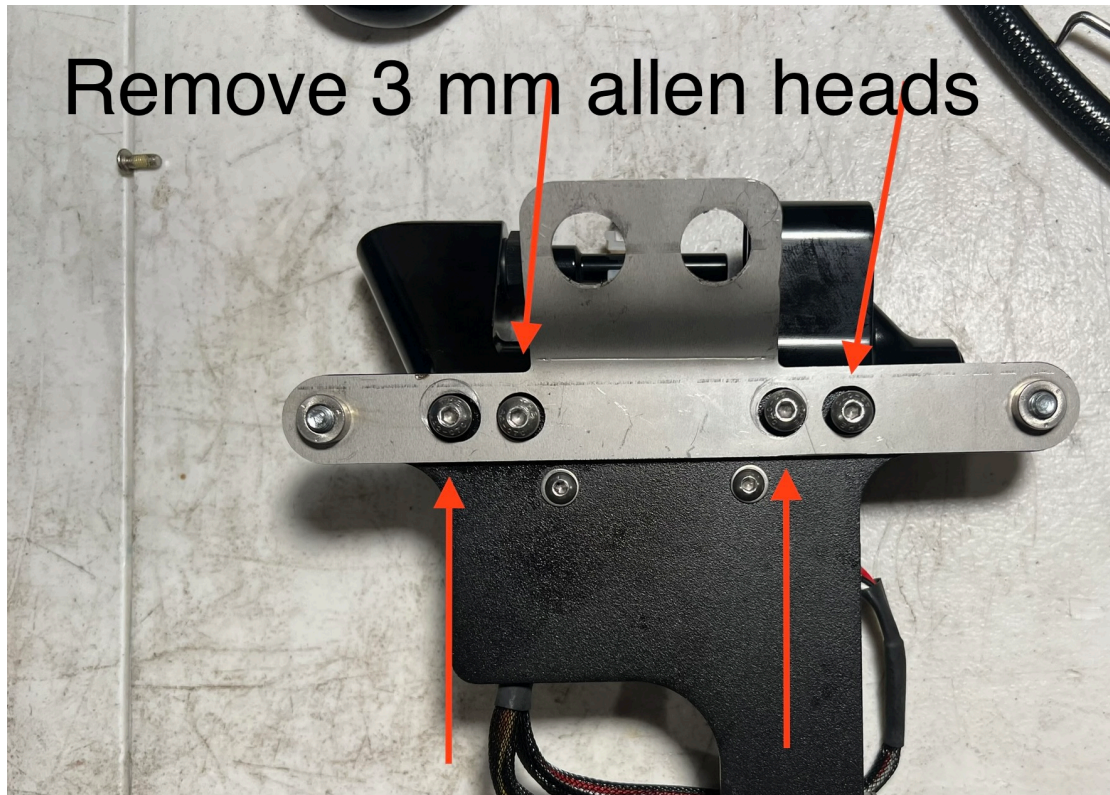


Remove
10mm bolts

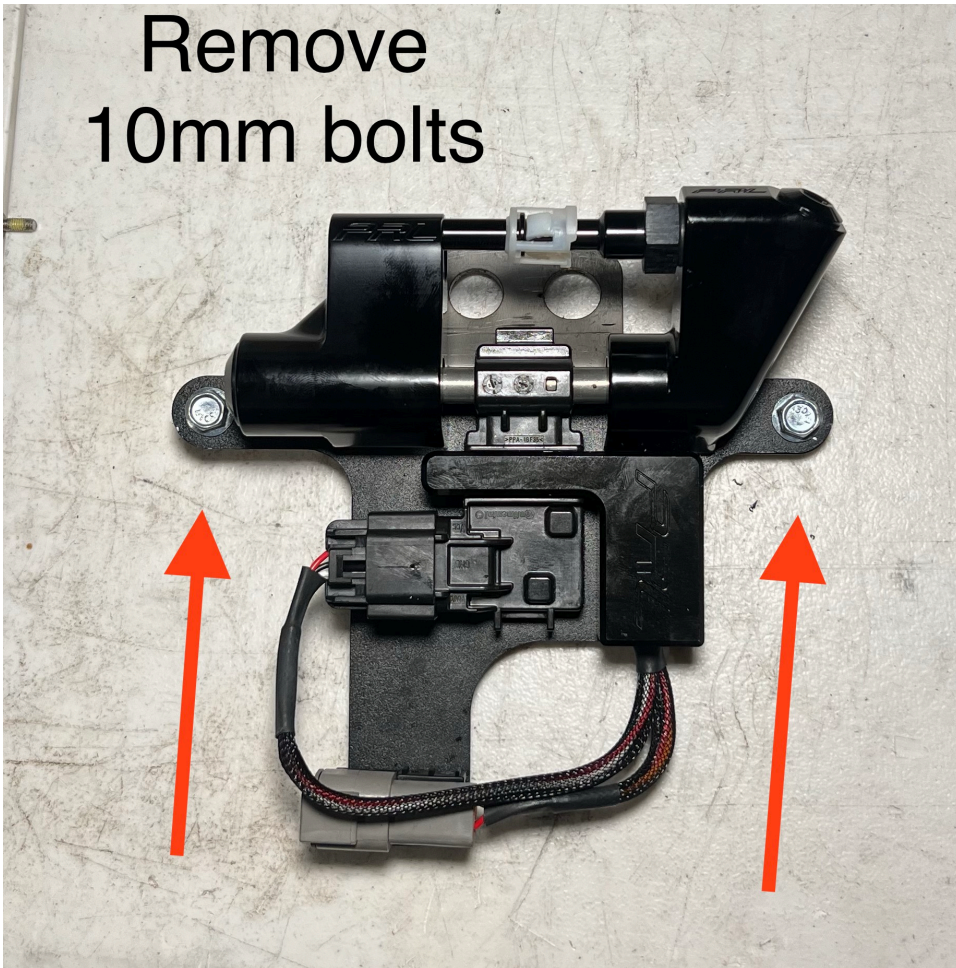




Remove
both fittings

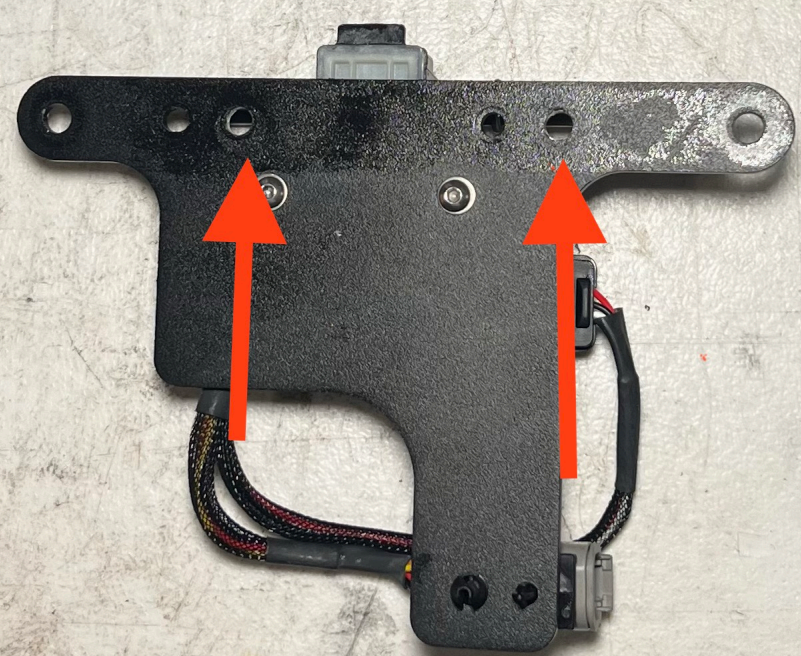

Use 1/4 inch drill bit
to open these holes


Place the bracket
as shown with the
10 mm bolts here

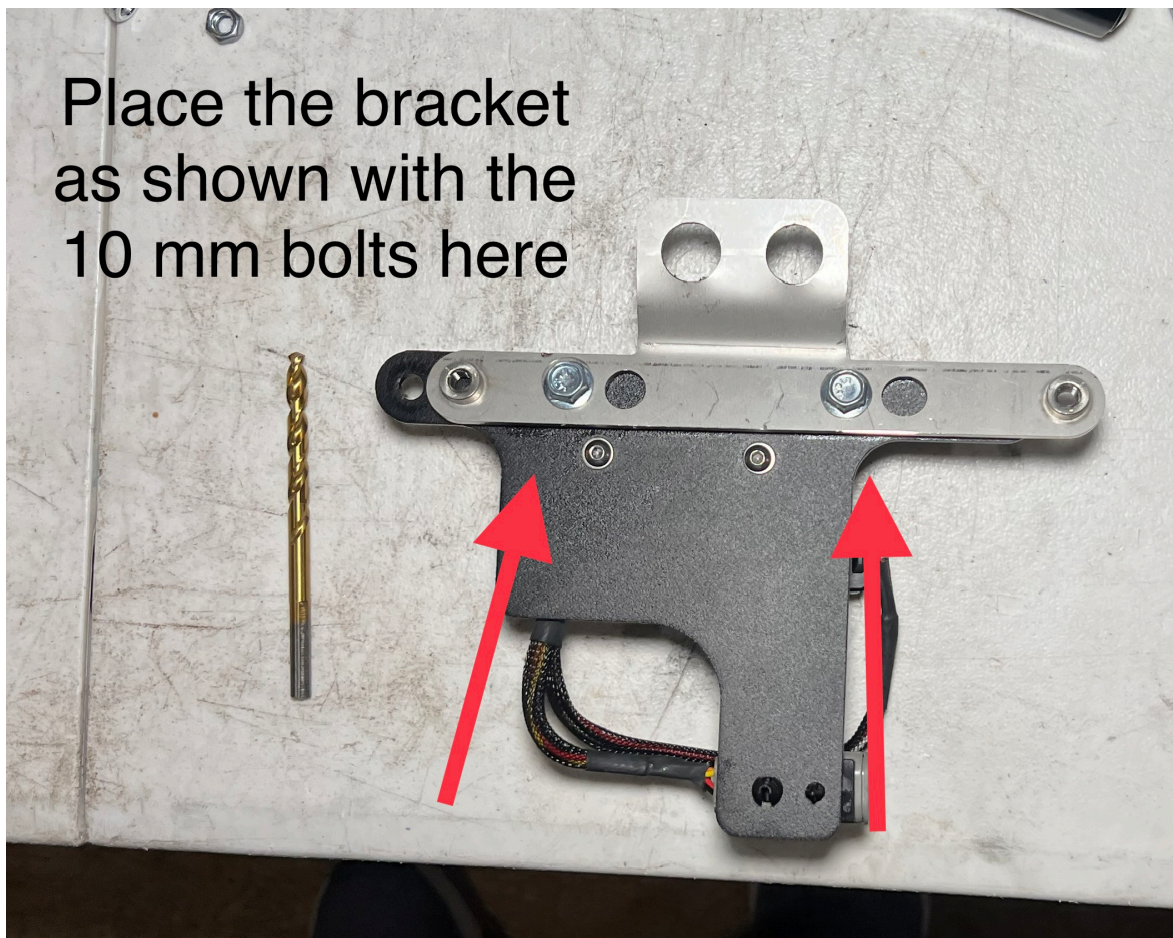

Use supplied 10
mm nuts as
shown here to
secure the
bracket




Remove
locking clip
from
Upperline

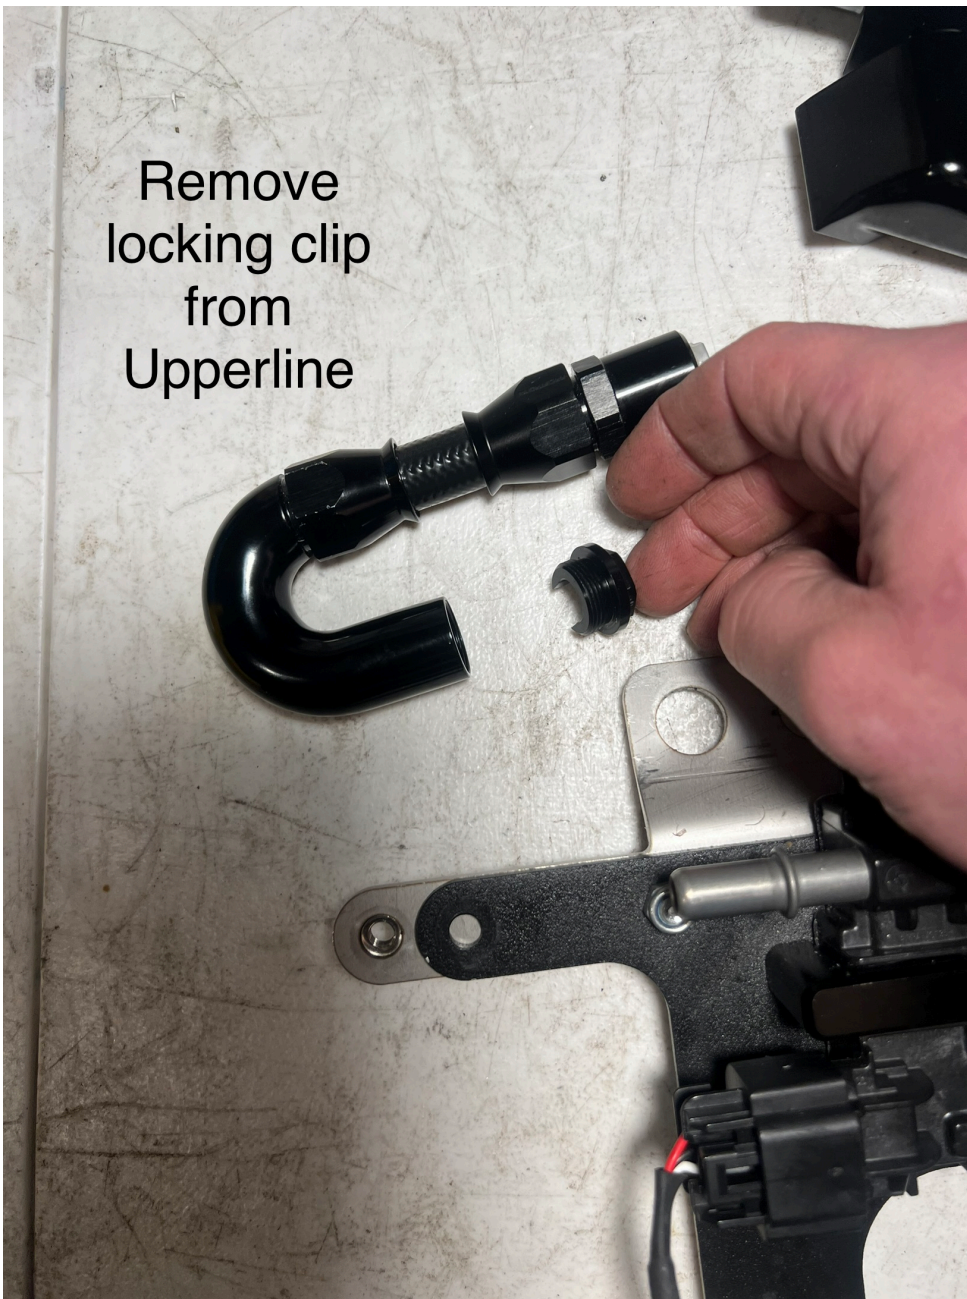

Place locking
clip as shown
and thread
into place



Hold clip in
place with
5/8 wrench
and tighten
by pulling
on upper
line

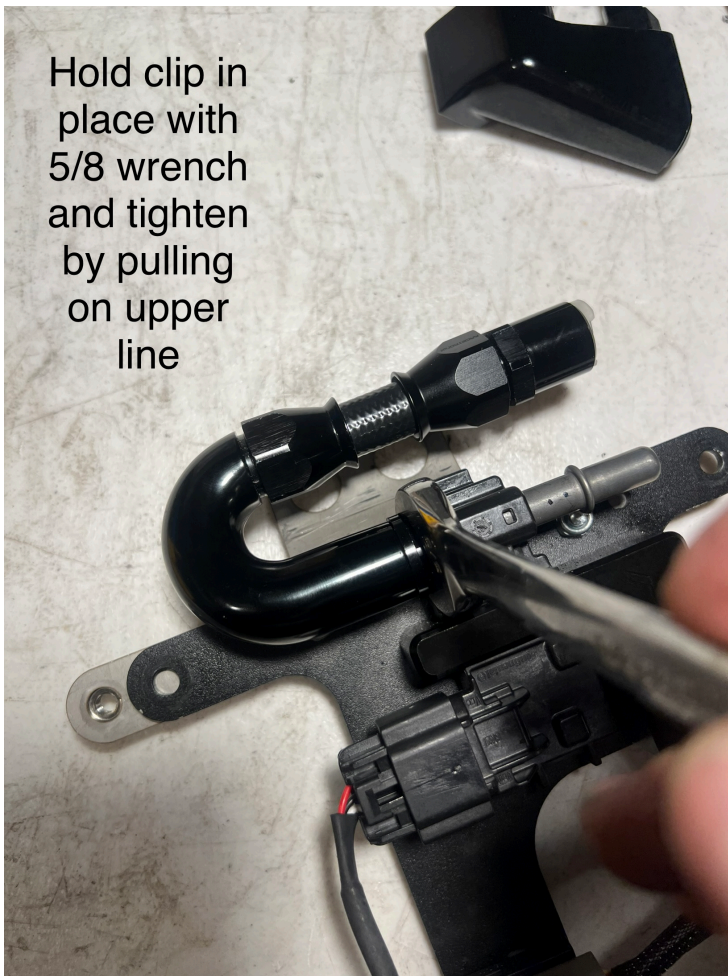

Place line as shown and install on the
vehicle. After install connect the lines. If
you have a catch can place the catch can
bracket in front of the flex fuel bracket.

